

Pro'sKit®


8PK-376FN

PRO-CRIMPER MODULAR TOOL

INSTRUCTIONS:

1. Insert the cable between the stripper blades. Squeeze the handles, and Twisted the wire, the outer insulation of the cable will be removed without damaging the insulation of the inner conductors.
2. Put the modular plug in correct place and gold contacts of the plug under, then insert the cable into the plug. Squeeze the handles firmly to set the contacts and secure the cable.

For 4,6,8,poles modular connector Plastic construction

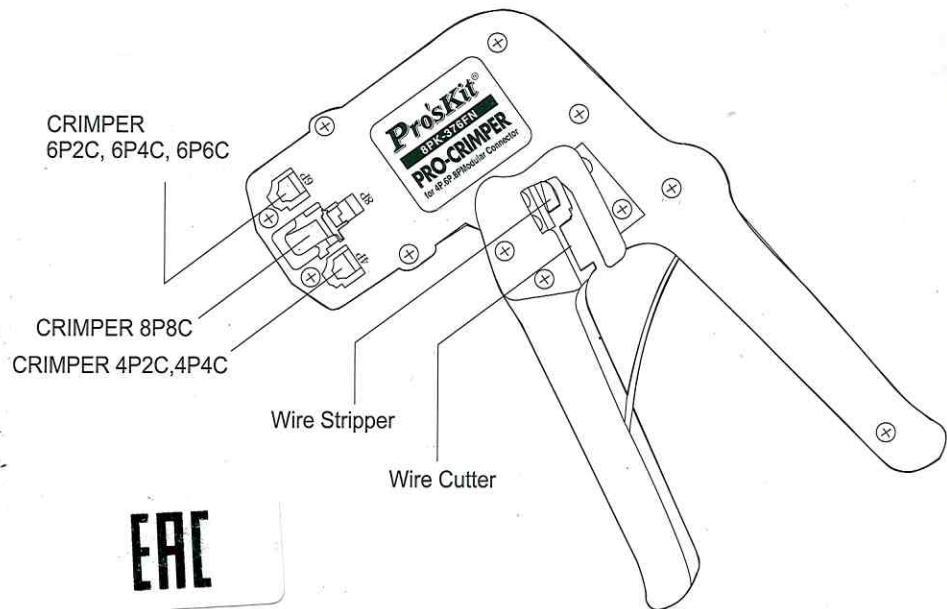

EAC

Pro'sKit®
ISO 9001
CERTIFIED

Part#8PK-376FN TAIWAN



PROKIT'S INDUSTRIES CO., LTD.

www.prokits.com.tw